



Please read before beginning assembly and be sure to wear eye protection to avoid injury, particularly if using power tools

surface like a blanket, carpet, or the flattened cardboard box the furniture was shipped in. together. **Please recycle the cardboard box and all paper and plastic packaging materials. one and know how to use it properly. Set the clutch setting at low/ medium torque. We do not side. This surface is hidden after assembly so the film can remain on the Block or it can be have something wrong and you should reread the instructions to ensure you are aligning the should not be unnecessarily forced together! If it seems parts aren't fitting together you likely please CAREFULLY remove all staples that held the shipping carton together. These can To avoid damaging the furniture, perform the assembly of your new furniture on a clean, soft you can easily overtighten and damage the product. All bolts come standard with a threadrecommend using an electric drill with a cord or without a clutch to install bolts in inserts as removed. Although not recommended, you may use a cordless screw gun or drill if you have proper components. The various "Blocks" used in assembly may have a protective film on one scratch you and the furniture and we don't want that to happen to either of you. Components When removing the furniture from the carton and if using the carton for an assembly surface. hand and then use the Allen Key/Hex Wrench to tighten until parts are drawn tightly and firmly ocking compound pre-applied to reduce loosening of the bolts over time. Start all bolts by

BLOCK & BOLT INSTALLATION

Insert bolts through countersunk hole side of blocks as shown below. When done properly, the top of the bolt will sit even or flush with the top surface of the block

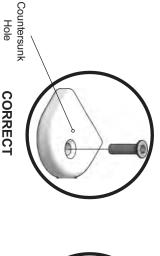

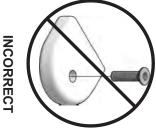

Included in the carton for use in tightening all bolts.. Allen Key/Hex Wrench Install Tool

5/32"

PRODUCT CARE

mineral deposits from hard water or other tougher cleaning jobs can be done with TimberTech Deck Cleaner which is specially formulated for this type of cleaning. or two of your favorite eco-friendly soap to the wash will get everything squeaky clean. Removing garden hose and incorporating a soft bristle brush to remove light dirt or spills. Adding a tablespoon lot of use and will at some point need cleaning. We recommend using clean water from a faucet or be left outside all year regardless of the season. However, we are pretty sure your furniture will get a Your new furniture is a very low maintenance product. You'll never need to paint or stain it and it can

WARRANTY

furniture and satisfied with your purchase and we back that up with a comprehensive Warranty. Please see the TimberTech + Loll Invite Collection Warranty for complete details. TimberTech is known for making beautiful, high-quality, outdoor living products that last and our Invite Collection of Outdoor Furniture is no exception. We want you to be happy that you chose our

PRODUCT DAMAGED IN SHIPMENT

the problem. If there is any damage, please save all of your packaging material in case a return is has not been damaged during shipping. If damage has occurred, please take digital pictures of the damaged furniture and the box it was shipped in, and call Customer Service using our toll free necessary. number: 877.275.2935. Sometimes accidents happen. Please inspect your furniture when you receive it to make sure that it The damage will be assessed and you will be contacted with a solution to

Reach out if you need assistance. We want you to love your new furniture. 1.877.275.2935

Chicago, IL 60607 1330 W Fulton Market, Suite #350





ASSEMBLY I





